



## **Instruction Manual**



**Model: EVHP46120M**  
**High Velocity Stand Fan**

**Distributed in Australia by:** **HONEYAIR**  
Honeyair Australia Pty Ltd. AUSTRALIA  
78 Mallard Way, Cannington WA 6107  
**P** 1300 710 860 **F** 1300 710 890 **E** [info@ghi.com.au](mailto:info@ghi.com.au)

## 1- OPERATING INSTRUCTIONS

### IMPORTANT NOTICE


Note:-Read these instructions fully before commencing assembly and operation of the fan.

Retain these instructions for future reference.

- a) Do not use the fan if the plug or power cord is damaged.
- b) Never insert fingers, pencils or any other object through the grille when the fan is running.
- c) Unplug the fan from the power socket when not in use and when moving it from one location to other.
- d) Unplug the fan from the power socket before cleaning.
- e) Do not use or place fan in wet areas such as bathrooms and shower rooms etc.
- f) Do not use the fan outdoors and do not allow fan to become wet any water or liquid entering the fan could cause an electric shock hazard.
- g) Do not cover the grille when the fan is in operation.
- h) Do not allow children to operate the fan.
- i) Completely assemble the fan before use.

## 2- PARTS LIST

1. L screw
2. Washer
3. Weight base insert
4. Fan base
5. Screw
6. Base tube
7. Decorate Cap
8. Extension tube locking nut
9. Extension tube
10. Fan head

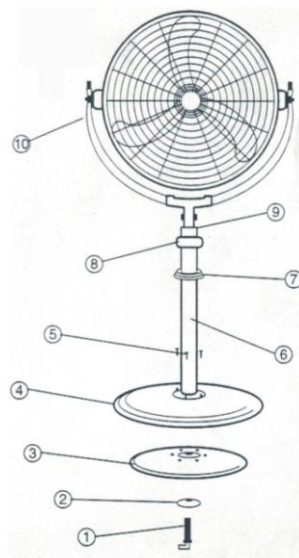

### **3- ASSEMBLY INSTRUCTIONS**

- a) Remove all items of packaging from the fan.
- b) Lifting the decorative cap (7) screw the base tube (6) onto the fan base (4) using the 4 screws (5).
- c) Position the weight base insert (3) under the fan base and secure with the L screw and large washer (1&2).
- d) Assemble the fan head (10) onto the extension tube (9), tighten the screw knob to lock head onto the extension tube.
- e) To adjust the height of the fan , loosen the extension tube locking nut (8), adjust to the required height and tighten the locking nut.

### **4- OPERATION PROCEDURE**

To operate, plug the fan into a 13A power socket outlet and simply turn the rotary switch to the desired speed setting.

1=LOW SPEED

2=MEDIUM SPEED

3=HIGH SPEED

To stop the fan ,turn the rotary switch back to the position marked O.

### **5- FAN DIRECTION ADJUSTMENT**

- a) Do not attempt to make any adjustments to the direction of the grille and fan assembly until the fan has been turned off and unplugged from the socket.
- b) To adjust the direction of the fan, hold the grille and gently tilt the fan until the desired position is reached.
- c) Plug the fan back into the socket and turn the fan on.

## 6- CLEANING

- a) Ensure that the fan is unplugged from the power socket before commencing cleaning.
- b) Parts should be cleaned with a soft dry cloth.
- c) Stubborn marks should be removed with a mild soap (detergent) and a damp cloth. Ensure that all traces of the soap film are removed with the damp cloth.
- d) Care should be taken to ensure that water (or other liquid) does not enter the fan motor housing or the speed control unit.

For all warranty claims please return to place of purchase. If unit is deemed to be faulty it will be replaced during the 12 month warranty period.

**Distributed in Australia by:**



**Honeyair Australia Pty Ltd.**

ABN 86 008 764 341

78 Mallard Way

Cannington WA 6107

Phone 1300 710 860

Fax 1300 710 890

Email: [info@gbi.com.au](mailto:info@gbi.com.au)