



Instruction Manual



**Model: EPF 50
50cm Pedestal Fan**

Distributed in Australia by: **HONEYAIR**
Honeyair Australia Pty Ltd.
78 Mallard Way, Cannington WA 6107
P 1300 710 860 F 1300 710 890 E info@ghi.com.au



1- GETTING TO KNOW YOUR PEDESTAL FAN

Congratulations on the purchase of your new Excelair Pedestal Fan.

Before first using your new Pedestal Fan, it is most important that you read and follow the instructions in this booklet, even if you feel you are familiar with this type of appliance. Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Your Pedestal Fan is safe and easy to use. It has been designed to function quietly and safely under normal circumstance. Your Pedestal Fan is fully portable with a sturdy stand and contemporary design. Its energy efficient blades circulate cool air while using less power than a standard light globe. The heavy duty motor is rated for continuous use to combat long hot summers.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Care should be taken when using the appliance due to the emission of hot water vapour;
- Unplug the appliance during filling and cleaning.

 
2- IMPORTANT SAFEGUARDS

Please Read all instructions.

- Disconnect the power plug before dismantling, assembling or before cleaning.
- Avoid touching mobile parts of the fan.
- Make sure the fan is on a dry and even surface.
- Never insert fingers, pencils or any other objects through the guards whenever the -power plug is connected, especially while running.
- Do not use the appliance for any other purpose than its intended use.
- The fan must not be used if the guards are not fastened according to instructions.

- When the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.

3-ASSEMBLY OF YOUR PEDESTAL FAN

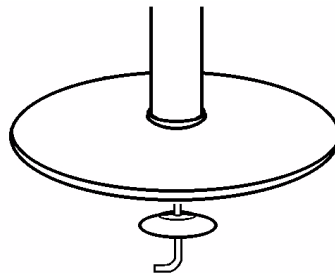


Loosen the height adjustment ring and extend the support pole. Initially the support pole will be held tightly in place. If necessary, use a pair of pliers to grasp the support pole and pull it into position.

To assemble the safety grille and blade assembly, remove the spinner (by turning it clockwise), then the locking nut (by turning it anticlockwise) from the motor spindle.


Place the back safety grille into position. Ensure the safety grille fits onto the locating lugs (Fig.1). If this is done correctly, the safety grille's carry handle will be at the top.

 Fix the safety grille into position by replacing the locking nut tightly by hand (Fig.1)
Do not force the locking nut. (Fig.1 – Locating lugs and locking nut)

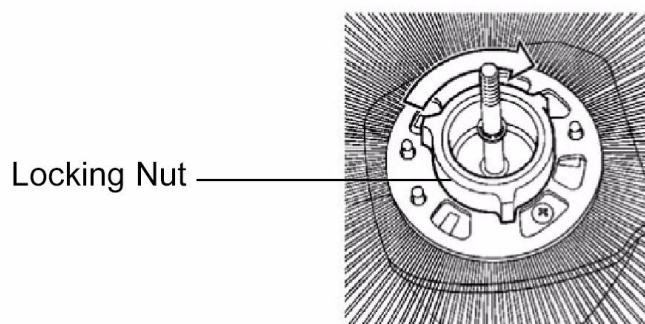


The groove in the centre of the fan blade aligns with a T-bar on the motor spindle to ensure correct positioning.

 
Fix the blade into place by gently hand tightening the spinner (Fig. 2) anticlockwise onto the end of the motor spindle. The spinner is self-tightening; do not force it.
(Fig. 2 Spinner tightens anti-clockwise)

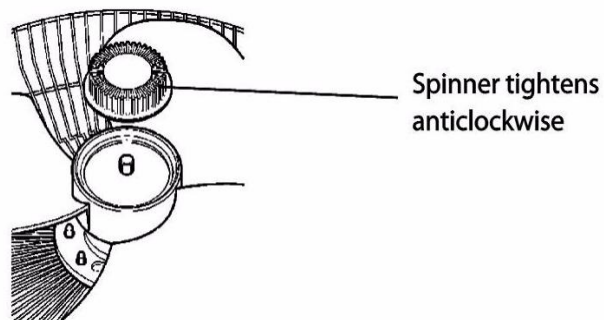

 Lift out all locking clips on the front safety grille (Fig.3)

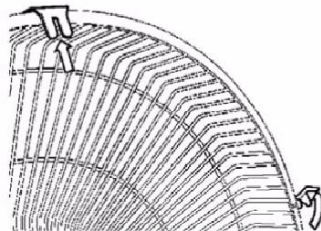

 
Place the safety grille into position and secure it by fastening the clips over the outer rim. The screw and nut at the bottom of the grille must be fitted (Fig.4).

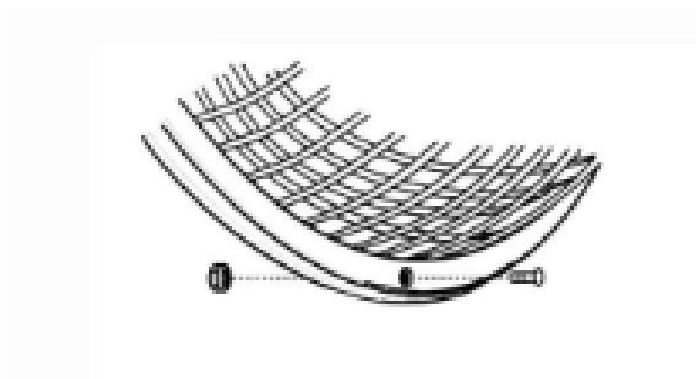

4- OPERATION OF YOUR PEDESTAL FAN

Remove the cable tie and unravel the cordset before operation.

 The fan and motor assembly are attached to a 4-position ratchet. Tilt up or down until the assembly clicks into the desired position (Fig.5).

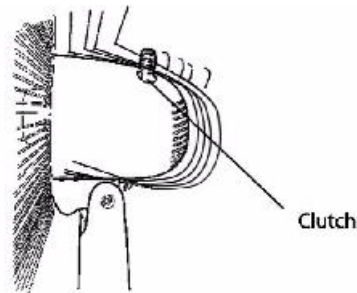

Press button 1 for a low speed , 2 for a medium speed and 3 for a high speed. Press 0 to switch the Pedestal Fan off.

To blow air in one direction and stop oscillation, allow the Pedestal Fan to move into the desired position and pull the clutch knob up. Press the clutch knob down to return to a normal oscillating function.

5- CARE AND CLEANING

Always disconnect electrical appliances before cleaning them.

To clean the blade and grille assembly, first remove the safety grille, unscrew the locknut and remove the blade from the Pedestal Fan. Wipe them clean with a slightly damp sponge.

Clean the motor housing and body assembly with a clean, damp cloth and wipe dry.

Never spray with liquids or submerge the Pedestal Fan in water or any other liquid.

If unit is deemed to be faulty, please return to place of purchase and it will be replaced during the 12 month warranty period.

Distributed in Australia by:



Honeyair Australia Pty Ltd.
ABN 86 008 764 341

78 Mallard Way
Cannington WA 6107
Phone 1300 710 860
Fax 1300 710 890
Email: info@qbi.com.au