



## Instruction Manual



**Model: ETF 901**

Distributed in Australia by: **HONEYAIR**  
Honeyair Australia Pty Ltd.  
78 Mallard Way, Cannington WA 6107  
P 1300 710 860 F 1300 710 890 E info@gbi.com.au



## **TABLE OF CONTENTS**

1. SAFETY INSTRUCTIONS
2. INSTALLATION CHART AND SPECIFICATIONS
3. ASSEMBLY OF THE APPLIANCE
4. OPERATING THE APPLIANCE
5. REMOTE CONTROL
6. CLEANING AND MAINTENENCE

## 1. SAFETY INSTRUCTIONS

### **Note: READ AND SAVE THESE INSTRUCTIONS**

- Keep the plastic parts away from grease and dirt. Don't use fan in kitchen, to avoid the parts being obstructed by grease and dirt. Fans are usually damaged by obstruction of grease and dirt.
- The product is designed for inside use only.
- Keep unit it on a flat surface, and 10cm distance from the wall in order for proper aeration and air distribution.
- Don't let children play with the fan, in order to avoid injury.
- Don't keep the power on when not in use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Please return to the place of purchase if the product is faulty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given instruction concerning use of the appliance by a responsible person.
- Children should be supervised when product is in use, to ensure that they do not play with the appliance.

## 2. INSTALLATION CHART AND TECHNICAL SPECIFICATIONS




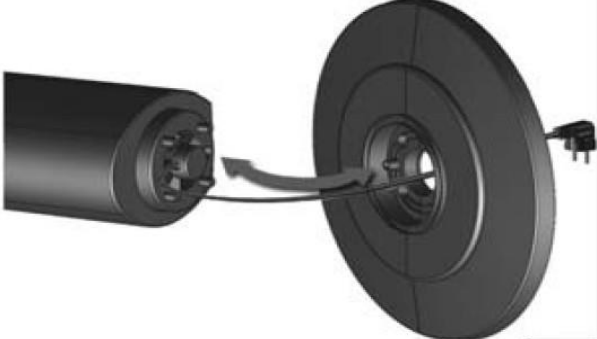

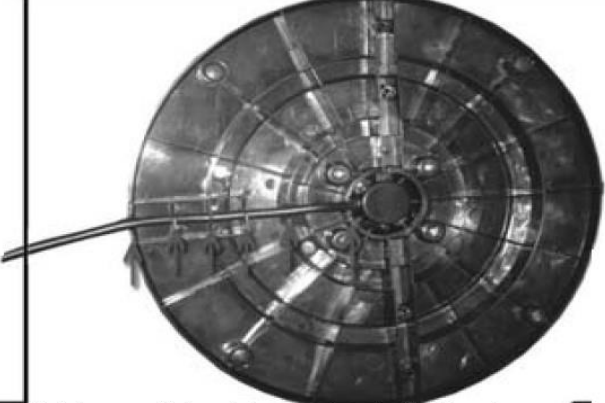
1. CONTROL SCREEN
2. CONTROL TOUCH
3. PUSH BUTTONS
4. AIR OUTLET
5. POWER CORD
6. BASE
7. HANDLE
8. REMOTE CONTROL
9. REMOTE CONTROL STORAGE



### TECHNICAL SPECIFICATIONS

- Negative Ion to purify the air LCD screen
- 43" Tower fan with remote control
- Motor protection against overheating
- Attractive and luxurious design 75° oscillation (right - left)
- 3 speed options (slow - medium - fast)
- Screening the room temperature /Thermometer
- Timer 1-23 hours
- VOLTAGE            220-240v
- FREQUENCY      50Hz
- POWER             50W

### 3. ASSEMBLY OF THE APPLIANCE

 <p><b>1</b> Loosen the four cross recess screws on the underside of the fan and remove them.</p>	 <p><b>2</b> Join the Base plate together .</p>
	 <p><b>4</b> Press the four openings of the rear base onto the four pegs of the front base.</p>
 <p><b>5</b> Pull the cord through Base plate.</p>	 <p><b>5</b> Push the power cable through the track on the underside of the rear base. Stand the fan upright. Make sure that the power cable leads through the opening on the rear base and that the base is not resisting on the power cable.</p>

#### 4. OPERATING THE APPLIANCE

Plug the appliance into the wall.

Press the push button to open the control panel. Both Control Touch Buttons and Remote Control can be used to run the unit.



#### ON / Off

On /Off button starts or stops the product, except for the timer. product will use the last selected parameters.



#### OSCILLATION

Oscillation can be started or stopped.

#### AUTO

Wind Speed can be adjusted between Low , Medium and High as Indicated by these symbols- LO. MED. HI



#### IONIZER

IONIZER indicates the ionization attribution to operating. The Ion symbol will flash when in use.



#### TIMER

Timer can be set between 1 and 23 hours. The Timer is in use while the Fan is operating and will be switched off after the designated time is up.

#### TEMP

TEMP screens the room temperature.

## 5. REMOTE CONTROL

The remote control can be stored in the storage place on the upper part of the fan. Before using the Remote, remove the Battery protection.

When using Remote Control, always aim it at the control panel. If the remote control doesn't work well, please first check the battery and replace batteries if needed.

Always Change the batteries with new ones, otherwise your remote control may not operate properly. Remove the batteries out of the remote control if you don't need to use the remote control for a long period of time. Leaving batteries in your remote control for long periods of unuse may damage your remote control.

## 6. CLEANING AND MAINTENANCE

It is recommended that you clean the fan and the remote control regularly. Please follow the below instructions-

### **Cleaning – Maintenance**

- Before you start cleaning the fan, switch it off at the wall socket and unplug. Take batteries out of the Remote control.
- Clean outer surfaces of the fan and Remote control with a soft damp cloth. Do not Use paraffin, thinner or any other chemicals. Use the brush attachment of your Vacuum cleaner to clean the grill.
- Don't immerse the fan or Remote control in water or any other liquids. Do not pour water or any liquid over the fan or Remote control.
- When you have finished cleaning, place batteries back into the remote control. Resume using the fan as described in the operations.

### **Storage**

- If you don't need to use either the fan or remote control for a period of over 3 weeks, then clean as described above.
- Replace remote control into its slot and store the whole unit in a cool dry place.



For all warranty claims please return to place of purchase. If unit is deemed to be faulty it will be replaced during the 12 month warranty period.

**Distributed in Australia by:**



**Honeyair Australia Pty Ltd.**

ABN 86 008 764 341

78 Mallard Way

Cannington WA 6107

Phone 1300 710 860

Fax 1300 710 890

Email: [info@ghi.com.au](mailto:info@ghi.com.au)