
Honeywell

Portable Air Conditioner

OWNER'S MANUAL

Read and save these instructions before use

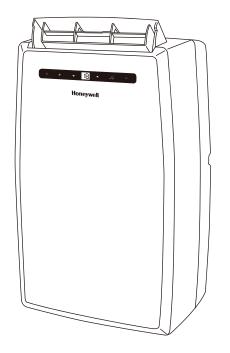

Model: MN10CES

Power rating: 900 Watts Voltage rating: 220-240 Volt AC, 50Hz

For product enquiry or support contact: CUSTOMER CARE: 1300 7108 60

Made in China

Read all instructions carefully before setting up and operating the unit. Keep this instruction manual for future reference. This manual is designed to provide you with important information needed to setup, operate, maintain and troubleshoot your portable air conditioner. Failure to follow these instructions may damage and/or impair operation and void the warranty.

SECTION	PAGE
INDEX	4
THANK YOU	
RECOMMENDED USE	
SAFETY	4
PARTS DESCRIPTION	6
CONTROL PANEL	7
REMOTE CONTROL	8
INSTALLATION	10
USE & OPERATION	
CLEANING & MAINTENANCE	14
WATER DRAINAGE	
TROUBLESHOOTING GUIDE	16
TECHNICAL SPECIFICATIONS	17
LIMITED TWO (2) YEAR WARRANTY	18

THANK YOU

Congratulations on your purchase of this versatile Honeywell Portable Air Conditioner.


The portable air conditioner is designed to improve comfort by adjusting the temperature and humidity in a room. Its mobility makes it easy to use in various rooms.

Read and follow the instructions.

RECOMMENDED USE

To ensure optimal efficiency of the product, we recommend keeping doors and windows closed when it is used as an air conditioner or dehumidifier.

If the product is being used with the fan function only, position the unit near an open window so that outside air is drawn into the unit, the air circulates in the room and then exits via the door.

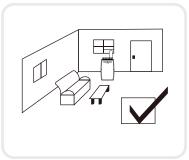



Cooling, Dehumidifying function

Fan function

Important : After transporting the unit, place it <u>UPRIGHT for 20 min.</u> <u>before use</u> to allow the refrigerant to stabilize.

- Check that the unit is complete with all accessories as outlined in this instruction manual.
- Follow installation instructions to set up your unit.
- A 10 amp minimum connection is needed to start the compressor.

SAFETY

READ AND SAVE THESE INSTRUCTIONS

Improper handling can cause serious damage to the appliance.

WARNING




- 1. Do not operate the unit with a damaged plug or loose socket point. If the power cord is damaged, it must be replaced by the manufacturer or a service agent.
- 2. Do not wet the housing or control panel.
- 3. Do not cover the air intake and exhaust when in use.
- 4. This appliance is not intended for use by children. Children should be supervised to ensure that they do not play on or around the appliance.
- 5. Do not place objects on or sit on the unit.
- 6. Always turn off and unplug the unit when you clean or service the unit.
- 7. Repair or disassemble the unit. If service is needed contact an authorized technician.
- 8. Unplug the unit when not in use or when it is stored.

- 9. Do not run the power cord under carpeting.
- 10. Arrange the cord away from areas where it may cause people to trip.
- 11. Do not use the product in areas where gasoline, paint or other flammable goods and objects are stored.

This household appliance is intended for use in a home or small office environment only. Any other use is not recommended by the manufacturer and could void its warranty. When using electrical appliances, basic safety precautions should always be followed.

PARTS DESCRIPTION

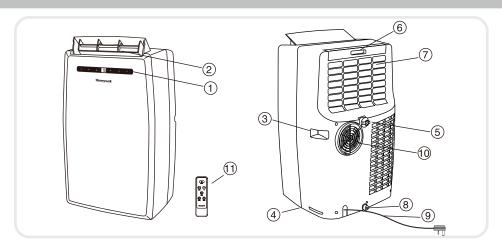



- 1. Control Panel (Incl. Signal Receptor)
- 2. Air Outlet
- 3. Handle
- 4. Caster
- 5. Water Drain Cap (Dehumidifying Mode) 11. Remote Control
- 6. Air Filter

- 7. Back grill
- 8. Water Drain Cap (Air Conditioning Mode)
- 9. Power Supply Cord
- 10. Hose Connector

Installation Kit:

1. Window Bracket Kit	1 set
2. Window Bracket Panel Adapter	1 Piece
3. Plastic Screws	2 Pieces
4. Hose Connector	1 Piece
5. Plastic Hose	1 Piece

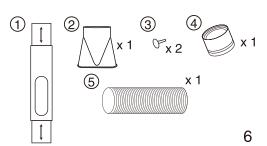

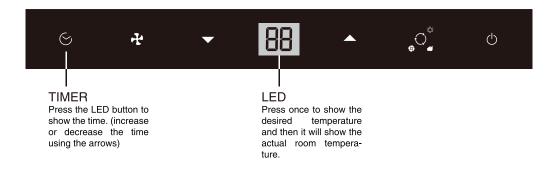


Indication symbols on control panel:

- ☆ Cooling Mode
- H High Fan Speed
- Dehumidify Mode
- Medium Fan Speed
- Fan Only Mode
- Low Fan Speed
- BB Display set temperature in Fahrenheit or Celsius
- Power ON/OFF
 (When flashing)
 Error-The machine will stop running
- Display timer setting to automatically turn on/off between 1 to 24 hours


REMOTE CONTROL

REMOTE CONTROL

Remote control functions work the same as the air conditioner's control panel. All key functions can be operated by remote control.

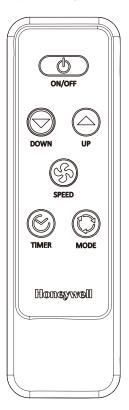

Battery Installation: Remove the cover on the back of the remote control and insert batteries (not included) with "+" and "-" poles pointing in the proper direction.

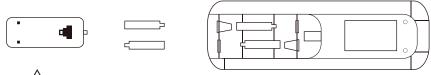

Caution /!

- Use only AAA or IEC R03 1.5V batteries.
- Remove the batteries if the remote control is not in use for a month or longer.
- All batteries should be replaced at the same time, do not mix with old batteries.
- · Do not dispose of the batteries in a fire as they may explode.


Note: Batteries not included.

NOTE


- Handle the remote control with care, do not drop or leave in direct sunlight.
- To operate, point the remote control signal transmitter toward the unit, making sure the signal path is not obstructed.
- Place the remote control at least 1 meter away from TVs or other electrical appliances.

INSTALLATION

1 Install the plastic hose with window bracket adapter and hose connector as shown. Ensure that the connections fit properly on both ends.

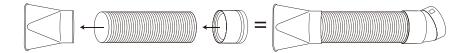


2 Adjust the window bracket according to the width or height of your window and secure with screw at the desired position.

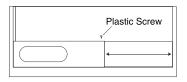


Note: Do not install the window bracket to your window. This step is required only to adjust the bracket according to the size of your window. Remove the bracket from the window after the size is adjusted.


3 Connect the plastic hose to the hose connector on the backside of your unit.

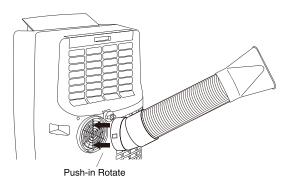

(4) Connect the window bracket to the end of the plastic hose. Ensure that all connections are tight and installed properly. (see diagram)

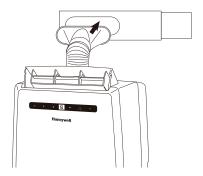

(5) Connect the window bracket to the window.

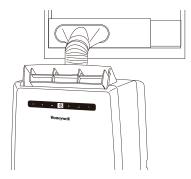


The Portable Air Conditioner is now ready-to-use.

For assistance with the installation, contact CUSTOMER CARE: 1300 710860

NOTE:

- 1. The supplied exhaust hose can be extended from 0.3 M to 1.19 M.
- Do not bend the exhaust hose (see below). A bent hose will block exhaust air and cause the unit to malfunction or shut-off.

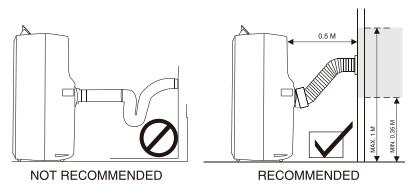

Warning:

- The length of the exhaust hose is designed according to the product specifications.
 Do not replace or lengthen it with any other pipe or hose as this could cause the unit to malfunction.
- Make sure the back of the unit is at least 0.5 M away from a wall.
 Do not place the unit in front of curtains or drapes as this could obstruct the airflow.

Power Control (

The power control turns the unit on and off.

Warning Light

Condensed water may accumulate inside the unit. If the internal tank becomes full, the Power Light will flash and the unit will not operate until the unit has been drained. Remove the drain cap (Page 6, Part 8) located on the lower backside of your unit to drain the excess condensate of water.

The Mode Control has three settings:

• Cool • Fan • Dehumidify

The settings are adjusted with the Mode Control button. A light will indicate which setting is being chosen.

• Cooling Mode *

When Cool Mode is selected, the indicator light will shine. During the Cooling Mode the air is cooled and hot air is exhausted through the exhaust hose on the backside. Adjust fan speed and air temperature to desired comfort level.

Note: The air exchange hose must vent outside the room when using Cool Mode.

• Dehumidify Mode 49

When Dehumidify Mode is selected, the indicator light will shine. Air is dehumidified as it passes through the unit. If room temperature is higher than 25° Celsius / 77° Fahrenheit, fan speed can be adjusted; otherwise fan speed is fixed to "Low".

Note: If the unit is to be used as a dehumidifier, do not connect the exhaust hose. Let the warm air return to the room. Remove the Water Drain Cap for continuous drainage in Dehumidifying Mode.

• Fan Mode 🧐

When Fan Mode is selected the indicator light will shine. Air is circulated throughout the room with no cooling.

Note: unit does not need to be vented in Fan Mode.

Fan Speed Control 4

The Fan Speed Control has 3 settings: High, Medium and Low.

Timer 🔗

Auto turn off:

With appliance in Running Mode, set timer by pressing the timer button. Press "▲" or "▼" to select number of hours you would like the unit to run before it automatically shuts off.

Auto turn on:

With appliance in Stand By Mode, set timer by pressing the timer button. Press "▲" or "▼" to select number of hours before the unit automatically starts running.

Note: The time is adjustable from 1~24 hours.

LED Control Panel Settings Barro view adjustments.

Timer / Temp set controls ▲ ▼

- To adjust the thermostat.
- The default display is room temperature.
- In Cool Mode, when "▲" or "▼" button is pressed, the set temperature is displayed and may be adjusted. After 10 seconds the display will revert back to room temperature. Temperature is only adjustable in Cool Mode.

Note: Pressing both "▲" and "▼" at the same time for more than 3 seconds will toggle the display between Celsius and Fahrenheit.

CLEANING & MAINTENANCE

APPLIANCE MAINTENANCE:

- 1. Turn off the appliance and disconnect from the power supply.
- 2. Clean with a soft dry cloth.
- 3. Never use volatile substances such as gasoline or polishing powder to clean the appliance.
- 4. Never spill water onto the main unit.

AIR FILTER MAINTENANCE:

Clean the air filter after 100 hours of use, according to the following steps:

- 1. Turn off the appliance and remove the air filter.
- Clean and reinstall the air filter. If there is a significant amount of dirt, wash it with a solution of detergent and lukewarm water. After cleaning, dry in a shaded and cool place, then reinstall.
- 3. Clean the air filter every two weeks if the air conditioner operates in an extremely dusty environment.

MAINTENANCE AFTER USE:

- If the appliance will not be used for a long time, be sure to drain the left-over water condensation by removing the rubber plug from the drain port located in the lower backside of the air conditioner. Use a shallow pan to collect the water while draining.
- 2. Before storing, run the unit in fan mode for 30 minutes to dry moisture.
- Turn off the appliance and then unplug the power supply plug. Take out the batteries in the remote control.
- 4. Clean the air filter and reinstall it.
- Remove the air hoses and keep them in a safe place. Put covers over the air holes on the unit.

Two drain caps are located on the backside, one for Dehumidifying Mode and one for Air Conditioning Mode. Water should be drained in Dehumidifying Mode and also in Air Conditioning Mode when ambient humidity is very high.

Always drain excess water accumulation from inside the unit. The appliance will stop running and an error message will be displayed when water needs to be drained.

WATER DRAIN (AIR CONDITIONING MODE)

In most cases, the Auto-Evaporation System eliminates the need to manually drain water.

In high humidity areas, water may collect and should be drained by removing the cap and placing a tray (not provided) under the drain.


Water will automatically drain out.



CONTINUOUS WATER DRAIN (DEHUMIDIFYING MODE)

Water accumulated inside the tank should be continuously emptied using the following steps: (refer to fig.)

- Remove the drain cap, connect the 5/8" drain connector with a 3/4" hose (not included)
- Direct the hose away from the appliance into a floor drain.

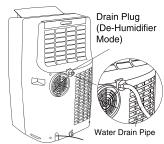

TROUBLESHOOTING GUIDE

The following troubleshooting guide addresses the most common problems and is by no means exhaustive. If problems persist, call customer service. A certified electrician or air conditioning technician should complete any service work. Unplug and disconnect the appliance from the power source before attempting to troubleshoot any of the following problems.

Problem	Possible Cause	Solution
The air conditioning unit does not start	No electricity. Batteries in the remote control are dead. The electrical cord is not properly plugged in. The safety device of the plug has tripped.	Check for power. Change remote control batteries. Remove and reconnect the power cord. Reset the safety device, if problem persists contact our toll free customer service.
Runs a short while only	 The temperature is too close to room temperature. Air outlet is blocked by obstacle. There are tight bends in the air exhaust hose. 	Lower the set temperature. Check that there are no obstacles obstructing air discharge. Eliminate the tight bends.
Runs but does not cool	 A door or window is open. A heat generating appliance such as a heater or high-powered lamp is on. The air filter is dirty. The exhaust hose is detached. Temperature setting is too high. Air outlet or intake is blocked. 	Clean or replace the filter. Connect the exhaust hose. Reduce temperature setting on control panel. Check both inlet and outlet if there is enough air going inside and coming out.
Will not run and water full indicator light is ON	The tank inside the appliance is full.	Drain the water through the drain port.

NOTE

For product enquiry or support contact: CUSTOMER CARE: 1300 710860

TECHNICAL SPECIFICATIONS

Description of Product	Portable Air Conditioner
Model	MN10CES
Voltage/Frequency	220-240V~50Hz
Power	900W
Cooling capacity	10000 BTU 2.9 kW
Dehumidifying capacity	(L/H) of 1 . 6L / (L/24H) of 38.40L
Refrigerant	R-410A
Timer	24 hour
Dimensions (W) x (D) x (H) (mm) / (inch)	385 X 460 X 745mm / 15 x 18 x 29 inches
Weight (Kg) / (lbs)	29.1 Kg / 64.2 lbs

(EC) No. 842/2006:

Do not vent R-410A into atmosphere: R-410A is a fluorinated greenhouse gas, covered by Kyoto Protocol, with a Global Warming Potential (GWP) = 1975.

Waste electrical products should be properly disposed.

Please recycle where facilities exist. Check with your local authority or retailer for recycling.



LIMITED TWO (2) YEAR WARRANTY

- All Honeywell Portable Air Conditioners purchased from Honeyair Australia Pty Ltd. are guaranteed to be free from manufacturing defects, workmanship or parts for a period of two years from date of purchase.
- Wear and tear parts such as filters, wheels, pre-filter nets and other consumable components, are not covered by the provisions of this warranty.
- Proof of purchase must be presented for at time of claim. Failure to produce POP will void the obligations of Honeyair Australia to exchange or replace the product.
- If the claim is due to product failure, Honeyair Australia will replace the product under warranty and will cover all associated costs.
- All products are covered by the Australian Consumer law which entitles the consumer to a
 replacement or refund for a major failure and for compensation for any other reasonable foreseeable loss or damage. Consumers are also entitled to replacement if the product fails to meet
 acceptable quality standards.
- Honeyair Australia reserves all rights to determine if the product is covered by the warranty.

Model:
Date of Purchase:
Purchased from:
For Warranty Claim and information contact: Authorized Distributor of Honeywell Evaporative Air Coolers
78 Ma ll ard Way, Cannington W.A. 6107
Tel: 1300 710860
Fax 1300 710890

Disclaimer:

Honeywell International Inc. makes no warranties with respect to this product.



National Distributor of Honeywell Portable Air Conditioners:

Honeyair Australia Pty Ltd, 78 Mallard Way, Cannington W.A. 6107 CUSTOMER CARE: 1300 710860

FAX: 1300 710890

www.honeywellportableac.com

MN10CES_IM_Eng_Australian_6
October 2013
© 2013 AirTek Int'l Corp. Ltd. All rights reserved.
The Honeywell Trademark is used under license from Honeywell International Inc.
Honeywell International Inc. makes no representations or warranties with respect to this product.
This product is manufactured by Airtek Int'l Corp. Ltd.

Honeywell